


## Alignment coupler terminals ECM (harness side)

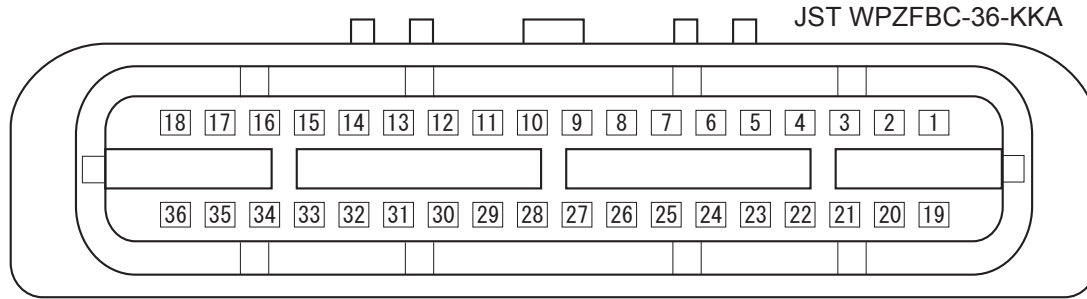

NO. TERMINAL	DESCRIPTION	NO. TERMINAL	DESCRIPTION
(1)	Power Supply	(19)	SDS
(2)		(20)	Immobilizer Communication
(3)	Sensor Signal CKP (CKP-)	(21)	Tacho
(4)		(22)	
(5)	Mode Selector	(23)	Speed Sensor
(6)	Sensor Signal IAP (IAP)	(24)	Sensor Ground (E2)
(7)	Sensor Signal TP (TP)	(25)	Sensor Signal ECT (ECT)
(8)	Ground ECM	(26)	Sensor Signal IAT (IAT)
(9)	Sensor Signal CKP (CKP+)	(27)	Immobilizer Communication
(10)	Sensor Signal TO (TOS)	(28)	—
(11)	Starter Relay	(29)	
(12)		(30)	
(13)	Power Source for Sensors (VCC)	(31)	Instruments Communication
(14)	Signal Motor Valve ISC	(32)	Signal Motor Fuel Pump
(15)	Fuel Injector	(33)	Immobilizer Error LED(?)
(16)	PAIR Solenoid	(34)	Fuel pump relay (Relay FP)
(17)	—	(35)	Ground ECM (E1)
(18)	Ignition COIL	(36)	Ground ECM (E3)